

Classic Brass

Fine Solid Brass Decorative Hardware

P.O. Box 3563
Jamestown, New York 14702-3563
(800) 869-3173
Fax: (800) 215-2019
E-mail: sales@classic-brass.com

Full Dummy Lever & Rosette Installation Instructions

PREPARE THE DOOR:

Determine the desired position of the levers on the door and mark. Drill a 1/2" diameter hole through the door, taking care to maintain the drill in a perpendicular angle to the surface of the door. NOTE: In some cases an additional 3/4" x 1/4" deep bore may need to be made behind mounting plate to insure proper fit.

INSTALLING THE HARDWARE:

1. Using a square on the door edge, position one of the dummy rosette mounting plates as shown, with the flat portion perpendicular to the edge of the door. Mark the center of the screw hole locations and drill three 1/16" pilot holes for the wood screws. Attach the mounting plate with the screws provided.

Slide the square spindle through the plate to align the second mounting plate.

2. Position the second mounting plate on the other side of the door. Attach the mounting plate in the same manner as the first one, using the screws provided.

3. Once both plates are firmly mounted to the door, manually center the spindle so it is equally spaced on either side of the door, making sure the spindle slot is oriented in a vertical direction, with the spindle slot groove facing down. This groove will accommodate the lever set screw.

4. Position a rosette over a mounting plate. Insert the threaded hub into the center hole of the rosette and screw it into the mounting plate. Tighten the threaded hub with the rosette hub key provided.

Repeat with the second rosette.

Note: Square and rectangular rosettes will only fit on the mounting plate when properly oriented. Rotate the plate as necessary to fit over the mounting plate.


5. Levers are drilled for either a left or right hand application. Slide the proper lever over one end of the spindle until it seats against the threaded hub. Secure it with the set screw using the 1/8" Allen wrench provided.

Repeat with the second lever.

BILL OF MATERIAL:

- (1) Lever, right hand.
Includes:
- (1) 1/4"-28 set screw.
- (1) Lever, left hand.
Includes:
- (1) 1/4"-28 set screw.
- (2) Dummy rosette mounting plate assemblies.
Each includes:
- (1) Mounting plate
- (1) Threaded hub
- (3) #5 x 1/2" FHWS
- (1) 8mm spindle.
- (2) Rosettes.
- (1) Rosette hub key.*
- (1) 1/8" Allen wrench.*

*May not be included with each box.

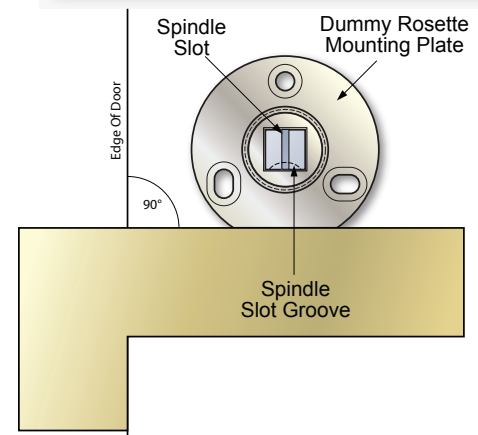

Pictures for reference only.
Your hardware may differ in appearance. Not to scale.

